







DEAR CUSTOMER,

Thanks for choosing PaviFLEX.

We are very pleased to be part of your Fitness equipment. We are committed to provide nothing but an excellent product at a reasonable price, accurate on-time deliveries, and the customer service that you deserve.

For any queries you can always contact us by telephone: +34 965403300 or by email: info@paviflex.es. Our customer service staff will always be there to assist you.

Thanking you again for choosing PaviFLEX as your Gym Flooring and Mats. It will always be our pleasure to provide you with the best.

Yours truly, PaviFLEX Team.

BEFORE INSTALLING

1st STEP

When the flooring is received, please keep in mind that during the transportation the product might have been damaged.

Please check it carefully before handling. Due to possible temperature variations during the haulage, we recommend leaving the product in the room where it is going to be installed, for at least 24 hours before the works.

Please check that the flooring has no defects. If so, you should notify PaviFLEX about the incidence, either by phone +34 965403300 or by email info@paviflex.es and agree a solution with us for the damaged tiles before start installing.





INSTALLATION

HOW TO INSTALL 2nd STEP

SURFACE


The surface where PaviFLEX is going to be installed must be solid, flat, and clean

PaviFLEX can be fixed on any type of surface (concrete, wood, stone, etc.).

INSTALLATION

As simple and easy as interlocking the puzzle mats, PaviFLEX do not need to be glued to the floor providing by this way and extra shock absorption and energy rebound at training time.

We will place the puzzle tiles in the setting up area and start interlocking them from the center of the room outwards in the clockwise direction. When reaching the walls or columns, the tiles must be cut straight (we can also supply straight tiles) and a free gap must be left between the tiles and the walls or columns.

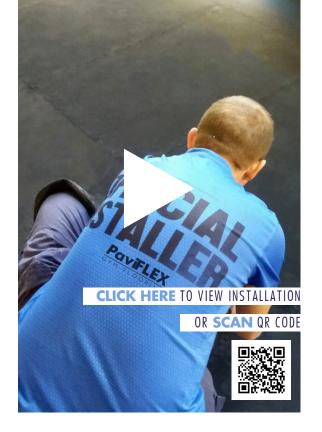

EASY INSTALLATION


FREE GAP

Our product absorbs impact and return the energy when training, so it works. To provide the best performance, it is essential that a dilation free space is left between the tiles and the walls or columns. The dilation margin will depend on the sqm dimension of the setting up area (Approx. 2mm per lineal meter). If such free margin is not taken into consideration, tiles could put up due to expansion and contraction.

Once the flooring has been properly installed, we will place the equipment and check that the dilation margin remains. In case that the free margin has been reduced due to the equipment weight, we will have to cut again the external tile edges to keep the 2cm margin of dilation.

WARNING: It is strictly not recommended attaching any structure to the flooring surface that requires screwing.

CUTFLEX PRO ULTIMATE TECHNOLOGY AUTOMATIC CUTTING MACHINES

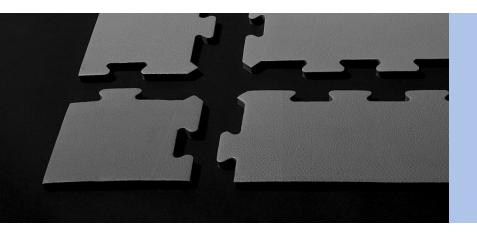

WARNING: PaviFLEX products under a high level of sun exposure, may undergo a color tone variation or malformation. In case the area is besides a window with no solar filter, we will have to somehow avoid the sun light directly heating the tiles. All our products, except TurFLEX & Out XTREMEeco are for indoor use only.






CORRECT PLACEMENT

ECO INSTALLATION

The correct placement of our ECO flooring during the installation will avoid black color-scheme differences due to the light reflection.

To avoid this, all flooring tiles should be placed with the orientation marking in the same position as shown in the layout plan below.



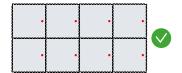


* Installation diagram at the bottom

PLEASE NOTE:

The orientation marking is located on the BOTTOM side

BOTTOM SIDE

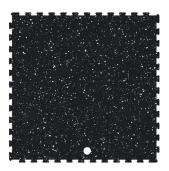

ORIENTATION MARKING

TOP SIDE





BEFORE INSTALLING

1st STEP

When you receive the order, please keep in mind that during the transportation the product might have been damaged. Please check that the product has no defects.

If so, you should notify PaviFLEX about the incidence, either by phone +34 965403300 or by email info@paviflex.es and agree a solution with us for the damaged tiles before start installing.

Before installing TurFLEX and to get a correct stuck, the floor where it is going to be placed must be properly cleaned. We will allocate and spread out the TurFLEX rolls in the room where they're going to be installed.

INSTALLATION

2nd STEP

SURFACE


The surface where TurFLEX is going to be placed must be solid, flat and clean. TurFLEX can be installed over any type of flooring such as concrete, ceramic, wood, etc.

INSTALLATION USING DOUBLE FACE ADHESIVE TAPE

We will lift the rolls bit by bit, applying the double face adhesive tape to the existing flooring, removing the upper side protective adhesive paper, placing the TurFlex material over the tape. It is recommended that double face adhesive tape is applied in all external edges of the TurFlex as well as applying the adhesive tape in a "X" form on every square meter of the surface to cover.

INSTALLATION USING

TurFLEX can be glued to the surface with glue and a hardener. We will allocate and spread out the TurFLEX rolls in the room where they're going to be installed. After mixing the glue with the hardener, we will have 20 minutes to apply the solution to the surface where TurFLEX is going to be fixed. It is mandatory a drying time before using the area.

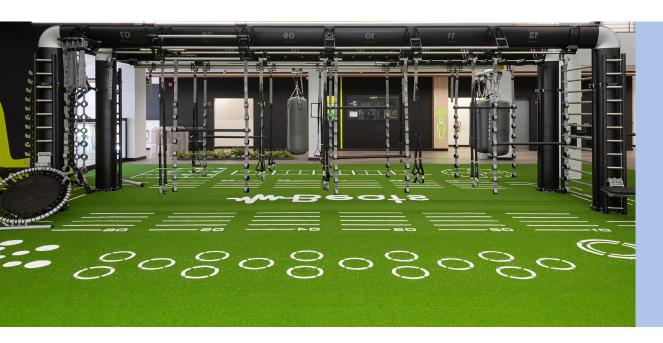

KNOW? TurFLEX is UV resistant, so it works for INDOOR and OUTDOOR use.



HOW TO INSTALL

3th STEP

PLACE TURFLEX IN THE AREA YOU WANT

Once the surface where TurFLEX is going to be placed has been properly cleaned. We will allocate and spread out the TurFLEX rolls, cutting with scissors the corners and edges avoiding pillars, columns, walls, Etc.



MOVE AWAY & CLEAN

Move away TurFLEX from small zones and get assured that the surface is clean (alcohol to be used at that end) for a proper stuck.





APPLYING DOUBLE FACE TAPE OR GLUE

ADHESIVE TAPE

Apply the adhesive tape by areas and place the TurFlex over the desired surface.


We must get assured that all exterior edges are properly fixed.





GLUE

Apply the solution by areas with a brush or a roller on the surface and place the TurFlex over. Leave to dry before using.

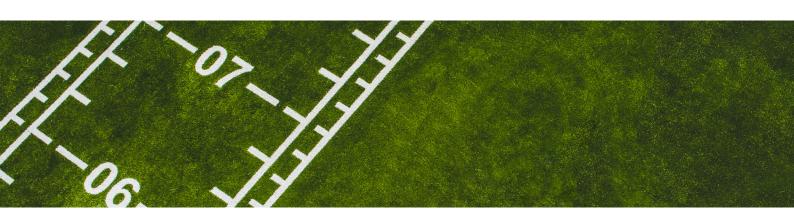



PaviFLEX







www.paviflex.es



MATERIAL

NEEDED











MOP (x3)



(Medium strength bridtles)





EVA FLOORING





JONTEC TENSOL or similar



• ATTENTION: DO NOT USE ABRASSIVE PRODUCTS.


POST-INSTALLATION

Before first use

• The Scrubber drier can be used for these steps.





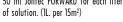

(DO NOT USE ON EVA FLOORING)



Apply with microfibre mop. Use different mops for different products (including water).



Wait 10 min Don 't allow it to dry.



Rinse well with clean warm water as many times as necessary to ensure elimination



Leave to dry completely.



DAILY CLEANING

For daily cleaning

The Scrubber drier can be used for these steps.





25 ml Jontec TENSOL for each liter of solution. (1L. per 25m2)







Apply with microfibre mop. Use different mops for different products (including water).





Leave to dry completely.


DEEP CLEANING

For intensive cleaning

- The Scrubber drier can be used for these steps.
- *In case of specific stains such as: dried cement, plaster, etc. Please contact: info@pavilex.es





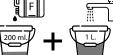

200 ml Jontec FORWARD for each liter of solution.(1L. per 15m2)

(DO NOT USE ON EVA FLOORING)



Apply with microfibre mop. Use different mops for different products (including water).



Wait 5 min. Don 't allow it to dry.



Scrub the solution



it to dry.

Wait 5 min. Don 't allow



warm water as many times as necessary to ensure elimination



Leave to dry completely.



MATERIAL

NEEDED

















(S)



• ATTENTION: DO NOT USE ABRASSIVE PRODUCTS.

TurFLEX

Deep cleaning


• The Turf cleaner can be used for these steps.



SlideFLEX Daily cleaning



Spray the slide with window cleaner

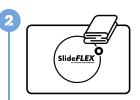

Scrub and wipe clean with a cloth



Apply Wax Slide



PAVIFLEXGUARANTEE

The validity of the guarantee would exclusively be applicable against manufacturing defects and only under the enclosed guarantee terms with a duration of 2 years from the selling date and always whenever the guideline for handling, installation and use have been respected.

It is mandatory to notify us any manufacturing defect by writing within 30 days after receipt of the material. Otherwise, the guarantee will become null and void.



HANDLING AND RECEIPT OF THE MERCHANDISE:

The merchandise must not be exposed to the sun light, direct rain, or temperatures over 40°C.

Before the installation, the manufacturer must be advised of any noticeable defects on the sheet surface. The duty of the manufacturer is replacing the damaged sheets. Due to the manufacturing process, the tiles might show a slight variation in color or sheen on their surface which should not be in any case considered as a defect.

HOW TO INSTALL:

Installation grounds:

The surface / ground where the paving is going to be installed must be completely flat and smooth to avoid any intervals when assembling the pieces together.

Temperature:

The paving cannot be exposed to temperatures over 40°C.

Sun exposure:

The areas exposed to a higher level of sun exposure can undergo changes such as loss of sheen, etc...In case that the installation is located besides a window or any other area where the sunlight exposure would affect the paving, it must somehow be protected to avoid the tiles getting into temperatures higher than 40 $^{\circ}$ C.

All our rubber products (except TurFLEX) are indoors as for an outdoor use they could undergo changes in color or malformation.

These products are subject to a minimum expansion and contraction due to temperature conditions.

As a general specification, when installing the flooring a dilation free space have to be left between the tiles and the walls or columns. The dilation margin will depend on the sqm dimension of the setting up area (Approx. 2mm per lineal meter). If such free margin is not taken into consideration, tiles could put up due to expansion and contraction.

Assembling steps:

The easiest way to make sure that the installation is carried out in the correct way, is starting the installation from the center going outwards filling the area in a clockwise radial order. To adjust the sheets in the end areas or those located against a wall or pillar, a cutting line must be marked, making a small incision with a knife going over it by several times.

WARNING: It is strictly NOT recommended attaching any structure to the flooring surface that requires screwing.

TERMS OF USE:

PaviFLEX Gym Flooring is a product with exclusive application to sport activities, and consequently stepping on should be made with proper sport shoes, with rubber soles except for PaviFLEX Tatami (designed for Martial Arts and Stretching) as well as PaviFLEX Junior (designed for children's playgrounds) which are to be used barefoot.

PaviFLEX Tatami & PaviFLEX Junior are not resistant to any structures or machinery. Special care should be taken by not unloading heavy merchandise with sharp ends that could eventually mark and break the surface, not recovering its original appearance.

The guarantee would become null and voided whenever any of the terms previously exposed have not been complied such as using the wrong footwear, using abrasive cleaning products, and/or giving the flooring a use other than the one for which it has been designed for.

